

PR 2-HS Quick guide

Basic Application

Press ON/OFF
Wait for Laser

Slow beeping

Solid beep

Fast beeping

Shock-Mode

1. Press ON/OFF
2. Shock-Mode activates automatically after 2 minutes
3. If rotator is bumped, laser stops rotating and all LEDs activate

Deactivation:

3. Press Shock-Mode button to deactivate Shock-Mode
4. LED indicates Shock-Mode is deactivated

PRA 20 Settings

Press to change Volume (normal/ loud/ off /low)

Press to change units (1/8 / 1/16 / off)

PRA 20 Menu Press ON/OFF for 3 sec. to enter

Menu



change the sound to beep more rapidly above the PRA 30 center mark or below

change digital measurement units from mm (Metric) to inches (Imperial)



PR 2-HS Quick guide


Keyboards:

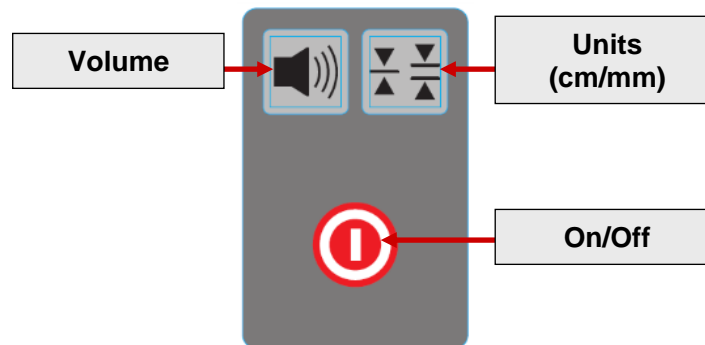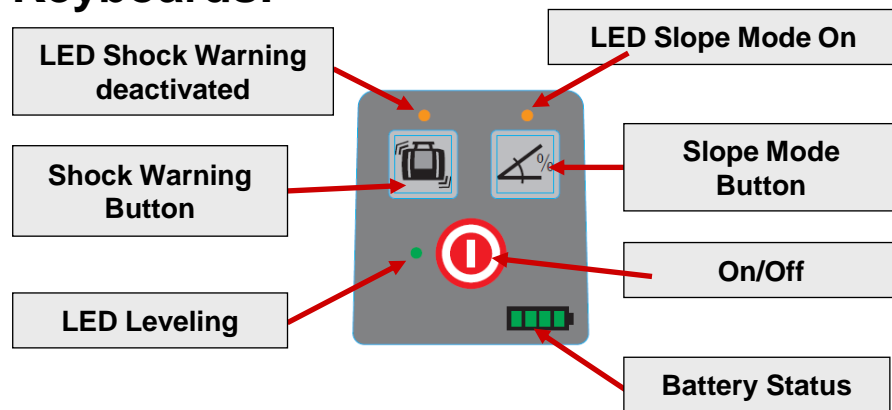

Slope

Mount PRA 79 Slope Adapter & PR 2-HS on Tripod

Set slope adapter to 0%.

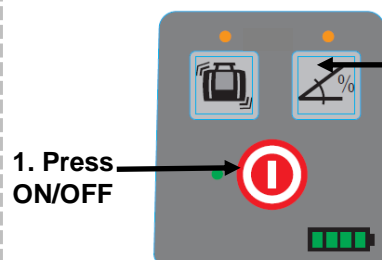

2. Press Slope Mode key
3. Wait for leveling

When laser starts to rotate, turn slope screw on slope adapter to set desired inclination.



* Read the operating instructions before the tool is used for the first time

