

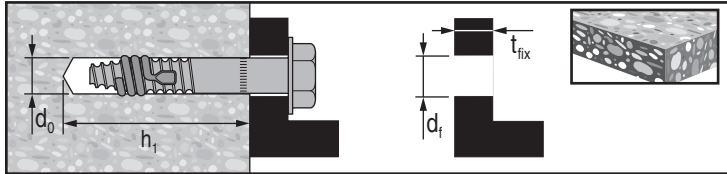
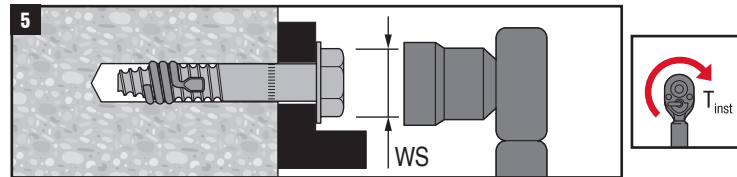
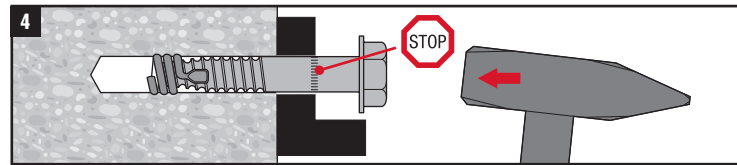
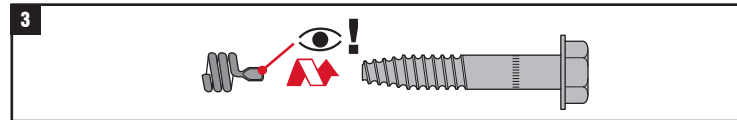


# HILTI

# HCA

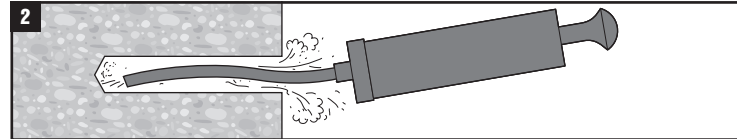

HCA	Ø d <sub>0</sub> [inch]	t <sub>fix</sub> [inch]	h <sub>1</sub> [inch]	d <sub>f</sub> [inch]
1/4 x 1 3/4	1/4	0 ... 5/8	1 3/4	5/16
1/4 x 2 1/2		0 ... 1 3/8	2 1/2	
1/4 x 3 1/2		0 ... 2 3/8	3 1/2	
3/8 x 2 1/4	3/8	0 ... 1/8	2 1/4	7/16
3/8 x 3		0 ... 7/8	3	
3/8 x 5		0 ... 2 7/8	5	
1/2 x 3	1/2	0 ... 3/8	3	9/16
1/2 x 4		0 ... 1 3/8	4	
1/2 x 5 1/2		0 ... 2 7/8	5 1/2	
1/2 x 7	5/8	0 ... 4 3/8	7	11/16
5/8 x 3 1/2		0 ... 3/8	3 1/2	
5/8 x 5		0 ... 1 7/8	5	
5/8 x 8	3/4	0 ... 4 7/8	8	13/16
3/4 x 4 1/2		0 ... 1/4	4 1/2	
3/4 x 6		0 ... 1 3/4	6	
3/4 x 10		0 ... 5 3/4	10	

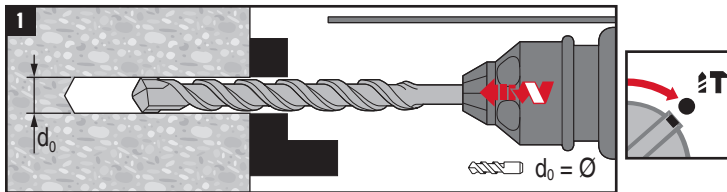

5.1	HCA [inch]	WS [inch]	t <sub>inst</sub> [ft-lb]
	Ø 1/4	7/16	10
	Ø 3/8	9/16	40
	Ø 1/2	3/4	80
	Ø 5/8	15/16	130
	Ø 3/4	1 1/8	180